

EN

G 1700

Alarm thermometer

- BNC connection
- Waterproof
- Precise and fast



Members of GHM GROUP:

GREISINGER
HONSBERG
Martens
IMTRON
DeltaGHM

Table of contents

1	About this documentation	4
1.1	Foreword.....	4
1.2	Purpose of the document.....	4
1.3	Legal notices.....	4
1.4	Correctness of content.....	4
1.5	Layout of this document.....	4
1.6	Further information	5
2	Safety	6
2.1	Explanation of safety symbols	6
2.2	Foreseeable misuse	6
2.3	Safety instructions	6
2.4	Intended use	7
2.5	Qualified personnel.....	8
3	Description	9
3.1	Scope of delivery	9
3.2	Job description.....	9
4	The product at a glance	10
4.1	The G 1700.....	10
4.2	Display elements	10
4.3	Operating elements	10
4.4	Connections.....	11
5	Operation	12
5.1	Commissioning	12
5.1.1	Explanation	12
5.2	Configuration	12
5.2.1	Explanation	12
5.2.2	Opening the configuration menu.....	12
5.2.3	Configuring parameters of the configuration menu.....	13
5.2.4	Adjustment of the measuring input	14
5.2.5	Configuring parameters of the adjustment menu.....	15
6	Bases for measurement	17
6.1	Sensor/device accuracy.....	17
6.2	Possible measuring errors	17
6.2.1	Immersion depth	17
6.2.2	Surface effects and poor heat transfer	17
6.2.3	Cooling / evaporation.....	17
6.2.4	Response time.....	17
6.2.5	Limit values.....	18
7	Maintenance	19
7.1	Operating and maintenance notices	19
7.2	Battery	19
7.2.1	Battery indicator.....	19
7.2.2	Changing battery	19
7.3	Calibration and adjustment service.....	20

7.3.1	Certificates.....	20
8	Error and system messages.....	22
9	Disposal.....	23
10	Technical data.....	24
11	Spare parts and accessories.....	25
12	Service.....	26
12.1	Manufacturer.....	26
12.2	Repairs.....	26
12.3	Sales subsidiaries.....	27

1 About this documentation

1.1 Foreword

Read this document carefully and familiarise yourself with the operation of the product before you use it. Keep this document ready to hand and in the immediate vicinity of the product so that it is available to the personnel/user for reference at all times in case of doubt.

The product was developed according to the state of the art and fulfils the requirements of the applicable European and national Directives. All corresponding documents are available from the manufacturer.

Only technically qualified persons are permitted to carry out commissioning, operation, maintenance and decommissioning. The qualified personnel must have carefully read and understood the operating manual before beginning any work.

1.2 Purpose of the document

- This document describes the operation and maintenance of the product.
- Provides important information for working safely and efficiently with the product.
- In addition to the quick reference guide with all relevant legal and safety content in hard copy, this document is a detailed reference option for the product.

1.3 Legal notices

The liability and warranty of the manufacturer for damages and consequential damages are voided with misuse, disregarding this operating manual, disregarding safety notices, assignment of inadequately qualified technical personnel and arbitrary modifications of the product.

Only carry out the maintenance and service tasks on this product that are described in this documentation. In the process, adhere to the specified steps. For your own safety, only use original spare parts and accessories of the manufacturer. We assume no liability for the use of other products and resulting damage.

This document is entrusted to the recipient for personal use only. Any impermissible transfer, duplication, translation into other languages or excerpts from this operating manual are prohibited.

The manufacturer assumes no liability for print errors.

1.4 Correctness of content

The contents of this document were checked for corrected and are subject to a continuous correction and updating process. This does not rule out potential errors. In the event that errors are discovered or in case of suggestions for improvement, please inform us immediately via the indicated contact information in order to help us make this document even more user-friendly.

1.5 Layout of this document

Description

Each chapter is explained at the beginning in the description.

Prerequisite

All mandatory prerequisites are then listed for each step.

Instruction

Tasks to be carried out by the personnel / user are represented as numbered instructions. Adhere to the sequence of the specified instructions.

Representation

Shows an illustrative instruction or a configuration of the product.

Formula

Some instructions include a formula for a general understanding of a configuration, programming or a setting of the product.

Outcome of an action

Result, consequence or effect of an instruction.

Emphases

In order to simplify legibility and provide a clearer overview, various sections / information are emphasised.

- *!234* Display elements
- *Mechanical controls*
- **Product functions**
- **Product labels**
- Cross-reference [▶ p. 4]
- *Foot notes*

1.6 Further information

Software version of the product:

- V1.2 or later

For the exact product name, refer to the type plate on the rear side of the product.



NOTE

For information about the software version, press and hold the ON button to switch on the product for longer than 5 seconds. The series is shown in the main display and the software version of the product is shown in the secondary display.

2 Safety

2.1 Explanation of safety symbols



DANGER

This symbol warns of imminent danger which can result in death, severe bodily injury, or severe property damage in case of non-observance.



CAUTION

This symbol warns of potential dangers or harmful situations which can cause damage to the device or to the environment in case of non-observance.



NOTE

This symbol indicates processes which can have a direct influence on operation or can trigger an unforeseen reaction in case of non-observance.

2.2 Foreseeable misuse

The fault-free function and operational safety of the product can only be guaranteed if generally applicable safety precautions and the device-specific safety instructions for this document are observed.

If these notices are disregarded, personal injury or death, as well as property damage can occur.



DANGER

Incorrect area of application!

In order to prevent erratic behaviour of the product, personal injury or property damage, the product must be used exclusively as described in the chapter Description [► p. 9] in the operating manual.

- Do not use in safety / Emergency Stop devices!
- The product is not suitable for use in explosion-prone areas!
- The product must not be used for diagnostic or other medical purposes on patients!
- Not suitable for SIL!

2.3 Safety instructions

This product has been designed and tested according to the safety requirements for electronic measuring devices.



CAUTION

Erratic behaviour!

On suspicion that the product can no longer be operated without danger, it must be decommissioned and prevented from recommissioning with appropriate labelling. The safety of the user can be impaired by the device if, for example, if it shows visible damage, it no longer works as specified or if it was stored for an extended period of time under unsuitable conditions.

- Visual inspection!
- In case of doubt, send the product to the manufacturer for repair or maintenance!



CAUTION

Stab injury!

Products with insertion probes entail the risk of stab injuries due to the pointed probe design.

- Handle insertion probes with care!
- Fit a protective cap on the measuring probe!



NOTE

If the product is stored at a temperature above 50 °C, or is not used for an extended period of time, the batteries must be removed. Leaks from the batteries are avoided as a result.



NOTE

This product does not belong in children's hands!



NOTE

The sensor handle, connecting cable and product housing are not designed for continuous contact with foods.

Designed for continuous contact with foods in accordance with EC Regulation 1935 / 2004:

- The temperature sensor from the measuring tip to approx. 1 cm before the end of the stainless steel tube.

2.4 Intended use

The product is a water-protected thermometer. It is designed for precise and instantaneous temperature measurements in the following media:

- Food
- Liquids
- Gases
- Soft plastic materials
- Bulk material

See Technical data [► p. 24].

2.5 Qualified personnel

For commissioning, operation and maintenance, the relevant personnel must have adequate knowledge of the measuring process and use of the measurements, for which purpose this document makes a valuable contribution. The instructions in this document must be understood, observed and followed.

In order to ensure that no risks arise from the interpretation of the measurements in the concrete application, the user must have additional technical knowledge, because the user is liable in case of damage/danger due to misinterpretation as a result of inadequate technical knowledge.

3 Description

3.1 Scope of delivery

Please check to ensure the completeness of the product after opening the package. You should find the following components:

- Quick reference guide
- Handheld measuring device, ready for operation, including batteries
- Test report

3.2 Job description

The product offers precision, speed and reliability in a compact, ergonomic housing. Additional impressive features include the dust-proof and waterproof design in accordance with IP 65/67 and the 3-line illuminated display, which offers overhead display at the push of a button. The product can be switched on, switched off and configured and the measurements and parameters can be adjusted and held with the operating elements. The product is equipped with a BNC connector for connecting Pt1000 sensors. The choice of a suitable temperature sensor allows the product to be used in diverse applications.

Temperature probe	Name	Application
Extra-thin insertion probe, Ø 1.5 mm	GF 1T-E1.5-B-BNC or GF 2T-E1.5-B without cable	Thawed meat
Durable insertion probe, Ø 3 mm	GF 1T-T3-B-BNC or GF 2T-E3-B without cable	Liquids, soft-plastic media
Immersion probe, Ø 3 mm	GF 1T-T3-B-BNC	Liquids

4 The product at a glance

4.1 The G 1700



LCD Display







G 1700






BNC connection

4.2 Display elements

Display

	Battery indicator	Evaluation of the battery status
	Unit display	Display of units, if applicable, with unstable symbol or type of mode, min/max/hold
	Main display	Measurement of the current temperature or value for min/max/hold
	Auxiliary display	Measurement of the current temperature in min/max/hold mode with unit

4.3 Operating elements

	On / Off button	
	Press briefly	Switch on the product Activate / deactivate lighting
	Long press	Switch off the product Reject changes in a menu
	Up / Down button	
	Press briefly	Display of the min/max value Change value of the selected parameter
	Long press	Reset the min/max value of the current measurement
	Both simultaneously	Rotate display, overhead display
	Function key	
	Press briefly	Freeze measurement Return to measurement display Call up next parameter
	Long press, 2s	Call up menu and close, changes are saved

4.4 Connections

BNC connection

Connection for temperature sensor

Un/locking with rotating ring on the cable plug



CAUTION

Waterproofness!

Waterproofness is only guaranteed for plug connections in the plugged-in state in combination with waterproof cable plugs.

- Protect contacts from soiling and moisture!

5 Operation

5.1 Commissioning

5.1.1 Explanation

Description	The product is switched on with the <i>On/Off button</i> . It may be necessary to configure the product after switching on. See Configuration [► p. 12].	
Prerequisite	<ul style="list-style-type: none"> – Sufficiently full batteries are inserted in the product. – A suitable temperature sensor is plugged in 	
Instruction	<ul style="list-style-type: none"> – Press <i>On/Off button</i>. 	
Outcome of an action	Information about the configuration of the product appears in the display.	
	<i>P_{OFF}</i>	Automatic shut-off Automatic shut-off activated. The product is switched off if no buttons have been pressed after the adjusted time
	<i>t_{0F}</i>	Zero point correction If a zero point correction of the temperature sensor was made
	<i>t_{5L}</i>	Gradient correction If a gradient correction of the temperature sensor was made
	The product is now ready for measurement.	



NOTE

With use of interchangeable sensors, the precision of the overall product can be optimised with adjustment of the gradient and compensation correction. Corrections are only applicable for the special sensor.

5.2 Configuration

5.2.1 Explanation

The following steps describe how to adapt the product for your purposes.



NOTE






There are various configuration parameters available depending on the product version and configuration. They can differ depending on the product version and configuration.

5.2.2 Opening the configuration menu

Description	In order to configure the product, you must first open the Configuration menu. The menu is opened as shown in the illustration.
Prerequisite	<ul style="list-style-type: none"> – The product is switched on.
Instruction	<ol style="list-style-type: none"> 1. Press the <i>Function key</i> for 2 seconds to open the Configuration menu. 2. <i>t_{0nF}</i> appears in the display. Release the function key.

3. By briefly pressing the *Function key*, you can scroll through the parameters. Select the parameter you would like to configure.
4. When you have selected the desired parameter, change the parameter to the desired value with the *Up button* and the *Down button*.
5. The changes are saved after running through the entire **Configuration** menu. *Star* appears in the display. The **Configuration** menu can be exited from any arbitrary parameter by pressing and holding the *Function key* for 2 seconds. The changes made up that point are saved.

Representation

Call up menu	Next parameter	Change value	Save changes	Discard changes
				
2s		Press: Single step Hold: Rapid change	2s	2s

Outcome of an action

The **Configuration** menu is closed after the last parameter.



NOTE

If the product is switched off without saving the configuration, the last save value is reproduced on the next start-up of the product.

5.2.3 Configuring parameters of the configuration menu

Description

The following representation shows the available parameters and various configuration options.



Prerequisite

- The **Configuration** menu is open. See Opening the configuration menu [▶ p. 12].

Instruction

1. Select the desired parameter you would like to configure.
2. Adjust the desired configuration in the selected parameter with the *Up button* and *Down button*.
3. The available configuration options are listed for each parameter in the following representation.

Representation

Parameter	Values	Meaning
		
Alarms		
<i>AL</i>	<i>oFF</i>	No active alarm
	<i>on</i>	Alarm alerting via text display, acoustic signal and flashing of the backlighting
	<i>bEEP</i>	Alarm alerting via text display and acoustic signal
	<i>L, tE</i>	Alarm alerting via text display and flashing of the backlighting
<i>ALLo</i>	<i>-70.0 .. ALHi</i>	Min. alarm limit; a min. alarm is triggered when the value is undercut, e.g. at -94.0 °F
<i>ALHi</i>	<i>ALLo .. 250.0</i>	Max. alarm limit; a min. alarm is triggered when the value is exceeded, e.g. at 482.0 °F

Shut-off time		
P_{OFF}	OFF	No automatic shut-off
	$15\ 30\ 60\ 120\ 240$	Automatic shut-off after a selected time in minutes, during which no buttons have been pressed
Backlighting		
L_{tE}	OFF	Backlighting deactivated
	$15\ 30\ 60\ 120\ 240$	Automatic shut-off of the backlighting after a selected time in seconds, during which no buttons have been pressed
	ON	No automatic shut-off of the backlighting
Temperature unit		
$Unit$	$^{\circ}C$	Temperature display in $^{\circ}C$
	$^{\circ}F$	Temperature display in $^{\circ}F$
Factory settings		
$Init$	NO	Use current configuration
	YES	Reset product to factory settings. $Init done$ appears in the display

Outcome of an action

The changed value is saved and the **Configuration** menu is closed. $Star$ appears in the display. If necessary, the product is restarted automatically in order to adopt the changed values.



NOTE

The configuration is closed if no button is pressed for 2 minutes. Any changes made up to that point are not saved. End appears in the display.

5.2.4 Adjustment of the measuring input

Description	<p>The temperature input can be adjusted with the zero point correction and the gradient correction. If an adjustment is made, you change the pre-adjusted factory settings. This is signalled with the t_{oF} or t_{sL} when the product is switched on. The standard settings of the zero point value and the gradient value is 0.00. It signals that no correction is made.</p> <p>In order to adjust the product, you must first open the Adjustment menu. The menu is opened as shown in the illustration.</p>
Prerequisites	<ul style="list-style-type: none"> – Sufficiently full batteries are inserted in the product. – The product is switched off. – Ice water, regulated precision water baths or a water bath with a reference measurement are available as a reference.
Instruction	<ol style="list-style-type: none"> 1. Press and hold the <i>Down button</i>.

2. Press the *On/Off button* to switch on the product and open the **Configuration** menu. Release the *Down button*. The display shows the first parameter.
3. By briefly pressing the *Function key*, you can scroll through the parameters. Select the parameter you would like to configure.
4. When you have selected the desired parameter, change the parameter to the desired value with the *Up button* and the *Down button*.
5. In order to save the new parameter value, press and hold the *Function key* for longer than 1 second.

Representation

Call up menu



Hold

Release

Outcome of an action

The **Configuration** menu is closed after the last parameter.



NOTE

If the product is switched off without saving the configuration, the last save value is reproduced on the next start-up of the product.

5.2.5 Configuring parameters of the adjustment menu

Description

The following representation shows the available parameters and various configuration options.

Prerequisites

The **Adjustment** menu is open. See Adjustment of the measuring input [▶ p. 14].

Instruction

1. Select the desired parameter you would like to configure.
2. Adjust the desired configuration in the selected parameter with the *Up button* and *Down button*.
3. The available configuration options are listed for each parameter in the following representation.

Representation

Parameter	Values	Meaning
Zero point correction		
t_{oF}	0.00 -5.00 .. 5.00	No zero point correction Zero point correction in °C. and/or at °F -9.00 .. 9.00
Gradient correction of the temperature		
t_{5L}	0.00 -5.00 .. 5.00	No gradient correction Gradient correction in %

Formula

Zero point correction:

$$\text{Displayed value} = \text{measured value} - t_{oF}$$

Gradient correction °C:

$$\text{Display} = (\text{measured value} - t_{oF}) * (1 + t_{5L} / 100)$$

Gradient correction °F:

$$\text{Display} = (\text{measured value} - 32 \text{ °F} - t_{oF}) * (1 + t_{5L} / 100) + 32 \text{ °F}$$

Example calculation

– Zero point correction t_{oF} to 0.00

- Gradient correction $\pm 5\%$ to 0.00
- Display unit $Unit$ to $^{\circ}\text{C}$
- Display in ice water -0.2°C
- Display in ice water setpoint $\pm 0.0^{\circ}\text{C}$
- Display in water bath 36.6°C
- Display in water bath setpoint $\pm 5\% = 37.0^{\circ}\text{C}$
- $\pm 0.0^{\circ}\text{C}$ = display zero point correction – setpoint zero point
- $\pm 0.0^{\circ}\text{C} = -0.2^{\circ}\text{C} - 0.0^{\circ}\text{C} = -0.2^{\circ}\text{C}$
- $\pm 5\% = (\text{setpoint gradient correction} / (\text{display gradient correction} - \pm 0.0^{\circ}\text{C}) - 1) * 100$
- $\pm 5\% = (37.0^{\circ}\text{C} / (36.6^{\circ}\text{C} - (-0.2)) - 1) * 100 = 0.54$

Outcome of an action



The changed value is saved and the **Configuration** menu is closed.

NOTE

If the product is switched off without saving the configuration, the last save value is reproduced on the next start-up of the product.

6 Bases for measurement

6.1 Sensor/device accuracy

The product can be equipped with different interchangeable sensors. Temperature sensors are categorised in the following classes.

EN 60751

Class	Deviation	Range
B	+/- 0.3 °C +/- 0.5 % of measurement	-50 ... +500 °C
A	+/- 0.15 °C +/- 0.2 % of measurement	-30 ... +300 °C
AA = 1/3 DIN B	+/- 0.1 °C +/- 0.17 % of measurement	0 ... +150 °C



NOTE

In order to achieve high exchange accuracy without the necessity of an additional correction, we recommend using Class A or AA temperature sensors.

6.2 Possible measuring errors

6.2.1 Immersion depth

Liquids

Immerse to a depth of at least 20 mm and then stir. Otherwise, measuring errors can occur due to the heat transmission of the sensor tube if the immersion depth is too shallow.

Gases

Immerse as far as possible into the gas to be measured so that the measuring sensor is subjected to a heavy flow.

6.2.2 Surface effects and poor heat transfer

Surface temperature

Special measuring sensors are required for this purpose. Surface characteristics, design of the measuring sensor, heat transfer and environmental temperature influence the measurement result.



NOTE

Thermally conductive paste between the measuring sensor and surface can also increase measurement accuracy in some cases.

6.2.3 Cooling / evaporation

Air temperature

The measuring sensor should be dry; otherwise the temperature measurement is too low.

6.2.4 Response time

Response time T_{90}

An adequate wait time must be observed for the measuring process before reading the measured value. The response time T_{90} describes the time in which the displayed measured value reached 90% of the end value. See Technical data [► p. 24].

6.2.5 Limit values

Temperature range



CAUTION

Destruction of the measuring sensor!

When conducting measurements in media with high or very low temperatures, there is a risk that the measuring sensor is not designed for such extremes.

- The limit values must be observed!
- Use suitable measuring sensors!

7 Maintenance

7.1 Operating and maintenance notices



NOTE

The product and temperature probe must be handled with care and used in accordance with the technical data. Do not throw or strike.



NOTE

Plugs and sockets must be protected from soiling.



NOTE

If the product is stored at a temperature above 50 °C, or is not used for an extended period of time, the batteries must be removed. Leaks from the batteries are avoided as a result.

7.2 Battery

7.2.1 Battery indicator

If the empty frame in the battery display blinks, the batteries are depleted and must be replaced. However, the device will still operate for a certain length of time.

If the *bAt* display text appears in the main display, the battery voltage is no longer adequate for operation of the product. Now the battery is fully depleted.

7.2.2 Changing battery



DANGER

Danger of explosion!

Using damaged or unsuitable batteries can generate heat, which can cause the batteries to crack and possibly explode!

- Only use high-quality and suitable alkaline batteries!



CAUTION

Damage!

If the batteries have different charge levels, leaks and thus damage to the product can occur.

- Use new, high-quality batteries!
- Do not use different types of batteries!
- Remove depleted batteries and dispose of them at a suitable collection point!



NOTE

Unnecessary screwing places the water-tightness of the product, among other things, at risk and should be avoided.



NOTE

Read the following handling instructions before replacing batteries and follow them step by step. If disregarded, the product could be damaged or the protection from moisture could be diminished.

Description


Proceed as follows to replace the batteries.

Prerequisites

- The product is switched off.
- A suitable PH1 is available

Instruction

1. Unscrews the Phillips screws and remove the cover.
2. Carefully replace the two Mignon AA batteries. Ensure that the polarity is correct! It must be possible to insert the batteries in the correct position without using force.
3. The O-ring must be undamaged, clean and positioned at the intended depth. In order to facilitate assembly and avoid damage, a suitable grease can be applied.
4. Fit the cover on evenly. The O-ring must remain at the intended depth!
5. Tighten the Phillips screws.

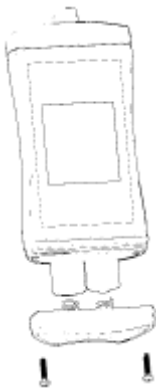

Outcome of an action

The product is now ready for use again.

7.3 Calibration and adjustment service

7.3.1 Certificates

The certificates are categorised as ISO calibration certificates and DAkkS calibration certificates. The purpose of the calibration is to verify the precision of the measuring device by comparing it with a traceable reference.



NOTE

The ISO standard 9001 is applied for the calibration certificates. These certificates are an affordable alternative to the DAkkS calibration certificates and provide information of the traceable reference, a list of individual values and documentation.



NOTE

The DAkkS calibration is based on DIN EN ISO/17025, the accreditation basis recognised worldwide. These certificates offer high-quality calibration and consistently high quality. DAkkS calibration certificates can only be issued by accredited calibration

laboratories which have demonstrated their expertise in accordance with DIN EN ISO/IEC 17025. The ISO calibration includes any necessary adjustment with the purpose of minimising a deviation of the measuring device.

DAkkS calibration certificates are accompanied with a list of individual measurements before and after the adjustment, documentation and, if applicable, graphic representation, calculation of the expanded measuring uncertainty and traceability to the national standard.



NOTE

The product is delivered with a test report. This confirms that the measuring device has been adjusted and tested.

All offered standard temperature sensors can be inserted without re-adjustment. Observe the connection and sensor type. If adjustment or calibration has been carried out, this only applies for this special measuring combination of measuring device and sensor.



NOTE

Only the manufacturer can check the basic settings and make corrections if necessary.

8 Error and system messages

Display	Meaning	Possible causes	Remedy
----	No suitable measuring probe connected	Incorrect measuring probe	Connect a suitable measuring probe
	Measurement far outside of the measuring range	Measuring probe or product defect	Measurement leaves the permissible range Send in for repair
No display, unclear characters or no response when buttons are pressed	Battery depleted System error Product is defective	Battery depleted Error in the product Product is defective	Replace battery Send in for repair
bAt	Battery depleted	Battery depleted	Replace battery
Err.1	Measuring range exceeded	Measurement too high Incorrect measuring probe connected Measuring probe or product defect	The measurement is above the permissible range Check measuring probe Send in for repair
Err.2	Measuring range is undercut	Measurement too low Measuring probe or product defect	The measurement is below the permissible range Check measuring probe Send in for repair
555 Err	System error	Error in the product	Switch product on/off Replace batteries Send in for repair

9 Disposal

Separation by material and recycling of device components and packaging must take place at the time of disposal. The valid legal regulations and directives applicable at the time must be observed.



NOTE

Fill in the return form available from the information base online at www.ghm-group.de and send it in with the product.



NOTE

The device must not be disposed of with household waste. If the product is disposed of, please take it to a municipal collection point, where it will be transported to a disposal company in accordance with requirements of hazardous goods laws. Otherwise, return it to us, freight prepaid. We will then arrange for the proper and environmentally-friendly disposal. Please dispose of empty batteries at the collection points intended for this purpose.

10 Technical data

Measuring range temperature	-200.0 +450.0 °C (-328.0 .. +842.0 °F) – Observe the permissible range of application of the sensor that is used!
Accuracy temperature	-20 .. +100 °C: $\pm 0.1 \text{ K} \pm 1 \text{ digit}$ otherwise: $\pm 0.2 \%$ of measured value $\pm 2 \text{ digits}$ plus sensor deviation, e.g. Class A
Response time T90 water (0.4 m/s)	Depending on the connected sensor
Measuring cycle	approx. 2 measurements per second
Temperature connections	BNC connection for Pt1000 sensor (EN 60751)
Display	3-line segment LCD, additional symbols, illuminated (adjustable white, permanent illumination)
Additional functions	Min/max/hold, alarm (optical and acoustic)
Compensation	Offset and gradient correction
Housing	Break-proof ABS housing
Protection rating	IP65 / IP67 (only with sensors identified as waterproof in the connected state for devices with BNC socket)
Dimensions L*W*H [mm]	108 * 54 * 28 mm without BNC socket
Weight	130 g, incl. battery, without sensor
Operating conditions	-20 to 50 °C; 0 to 95 % r.h. (temporarily 100 % r.h.)
Storage temperature	-20 to 70 °C
Current supply	2*AA battery (included in the scope of delivery)
Current requirement/ battery life	approx. 0.4 mA, approx. 2 mA with lighting Service life > 5000 hours with alkaline batteries (without backlighting)
Battery indicator	4-stage battery status indicator, Replacement indicator for depleted batteries: "BAT"
Auto-power-OFF function	The device switches off automatically if this is activated
Directives and standards	The devices conform to the following Directives of the Council for the harmonisation of legal regulations of the Member States: 2014/30/EU EMC Directive 2011/65/EU RoHS Applied harmonised standards: EN 61326-1:2013 Emission limits: Class B Immunity according to Table 2 Additional errors: < 0.5 % FS EN 50581:2012

11 Spare parts and accessories

A selection of spare parts and accessories for this product is listed below.

Article

Number	Name	Description
610049	Mignon battery AA	Mignon AA spare battery
609645	Pt1000	Ø 1.5 mm Pt1000 extra-thin insertion probe with BNC plug in Class B
609639	Pt1000	Ø 3 mm Pt1000 insertion probe with BNC plug in Class B
609549	Pt1000	Ø 3 mm Pt1000 handheld probe with BNC plug in Class B
609699	GF 1TK-E1.5	Ø 1.5 mm extra-thin insertion probe made of VA4 tube in Class 1
609697	GF 1TK-E3	Ø 3 mm insertion probe made of VA4 tube in Class 1
609695	GF 1TK-T3	Ø 3 mm immersion probe made of VA4 tube in Class 1
609700	GF 1TK-L3-GE	Ø 3 mm air probe made of VA4 tube in Class 1
611300	GF 1TK-L3-LE	Ø 3 mm air probe made of VA4 tube in Class 1 with loose ends
609700	GF 1TK-E1.5-LE	Ø 1.5 mm extra-thin insertion probe made of VA4 tube in Class 1 with loose ends
609699	GF 1TK-E3_LE	Ø 3 mm insertion probe made of VA4 tube in Class 1 with loose ends
609696	GF 1TK-T3-LE	Ø 3 mm insertion probe made of VA4 tube in Class 1 with loose ends
611373	ST-G1000	Device protection bag with 1 round cut-out

A complete list of all accessories and spare parts is available in our product catalogue or on our home page. We can also provide further information by phone.

Contact

Internet: www.greisinger.de

Tel: +49 94029383-52

12 Service

12.1 Manufacturer

Contact

If you have any questions, please do not hesitate to contact us:

GHM Messtechnik GmbH

GHM GROUP - Greisinger

Hans-Sachs-Str. 26

93128 Regenstauf | GERMANY

Phone: +49 94029383-52

info@greisinger.de | www.greisinger.de

WEEE reg. no. DE 93889386

12.2 Repairs

Open hours and contact

Defective products are repaired professionally and quickly in our service centre.

Monday to Thursday from 8:00 to 16:00

Friday from 8:00 to 13:00

GHM Messtechnik GmbH

Hans-Sachs-Str.26

Service Centre

93128 Regenstauf | GERMANY

Phone: +49 94029383-39

Fax: +49 94029383-33

service@greisinger.de



NOTE

Fill in the return form available from the information base online at www.ghm-group.de and sent it in with the product.

12.3 Sales subsidiaries

Austria

GHM Messtechnik GmbH
Office Austria
Breitenseer Str. 76/1/36
1140 Vienna | AUSTRIA
Phone +43 660 7335603
a.froestl@ghm-messtechnik.de

Brazil & Latin America

GHM Messtechnik do Brasil Ltda
Av. José de Souza Campos, 1073, cj 06
Campinas, SP
13025 320 | BRAZIL
Phone +55 19 3304 3408
Info@grupoghm.com.br

Czech Republic / Slovakia

GHM Greisinger s.r.o.
Ovci hajek 2 / 2153
158 00 Prague 5
Nove Butovice | CZECH REPUBLIC
Phone +420 251 613828
Fax +420 251 612607
info@greisinger.cz | www.greisinger.cz

Denmark

GHM Maaleteknik ApS
Maarslet Byvej 2
8320 Maarslet | DENMARK
Phone +45 646492- 00
Fax +45 646492- 01
info@ghm.dk | www.ghm.dk

France

GHM GROUP France SAS
Parc des Pivolles
9 Rue de Catalogne
69150 Décines-Charpieu (Lyon) | FRANCE
Phone +33 4 72 37 45 30
a.jouanilou@ghm-group.fr

India

GHM Messtechnik India Pvt Ltd.
209 | Udyog Bhavan | Sonowala Road
Gregaon (E) | Mumbai - 400 063
INDIA
Phone +91 22 40236235
info@ghmgroup.in | www.ghmgroup.in

Italy for Greisinger & Delta OHM

GHM GROUP – Delta OHM
Via Marconi 5
35030 Caselle di Selvazzano
Padova (PD) | ITALY
Phone +39 049 8977150
a.casati@ghm-messtechnik.de

Italy for Honsberg, Martens, Val.co

GHM GROUP – Val.co
Via Rovereto 9/11
20014 S. Ilario di Nerviano
Milano (MI) | ITALY
Phone +39 0331 53 59 20
alessandro.perego@valco.it

Netherlands

GHM Meettechniek BV
Zeeltweg 30
3755 KA Eemnes | NETHERLANDS
Phone +31 35 53805-40
Fax +31 35 53805-41
info@ghm-nl.com | www.ghm-nl.com

South Africa

GHM Messtechnik SA (Pty) Ltd
16 Olivier Street
Verwoerdpark, Alberton 1453
SOUTH AFRICA
Phone +27 74 4590040
j.grobler@ghm-sa.co.za